



# ps3 controller buttons Replacement

Change all the buttons including joy sticks for a PlayStation 3 controller.

Written By: wyatt



## INTRODUCTION

Change all the buttons including joy sticks for a PlayStation 3 controller.



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)



### PARTS:

- [playStation 3 controller buttons](#) (1)

## Step 1 — Controller



- Dual Shock 3 Play Station Controller.

## Step 2 — Unscrewing



- First you will take a little philips screw driver and remove the 5 screws from the back cover.




## Step 3 — Checking




- Make sure you have all your tools and pieces.

## Step 4 — Detaching

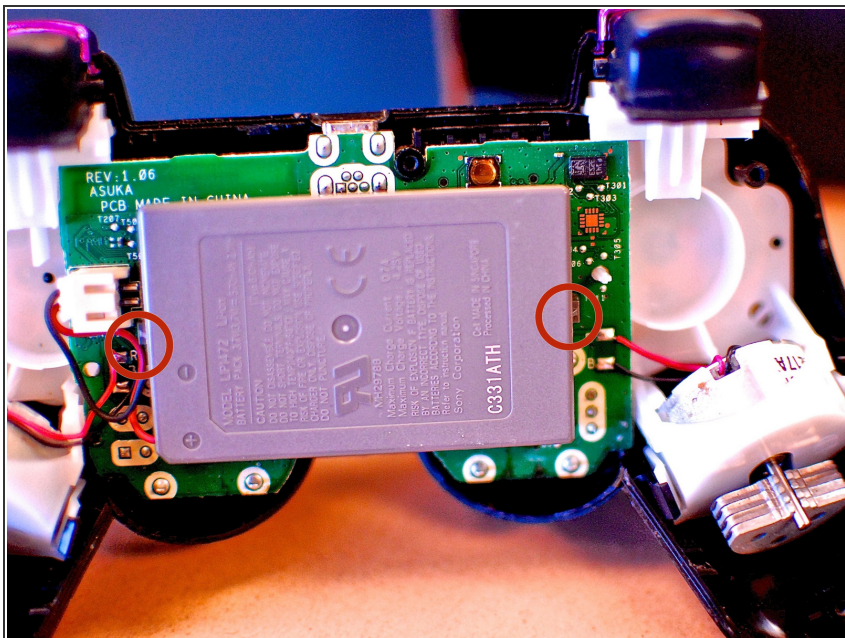



- Then you will lift the battery to unscrew the motherboard from the front cover, by squeezing the prongs inward (circled in red) and pulling up.

## Step 5 — Mother Board Detach

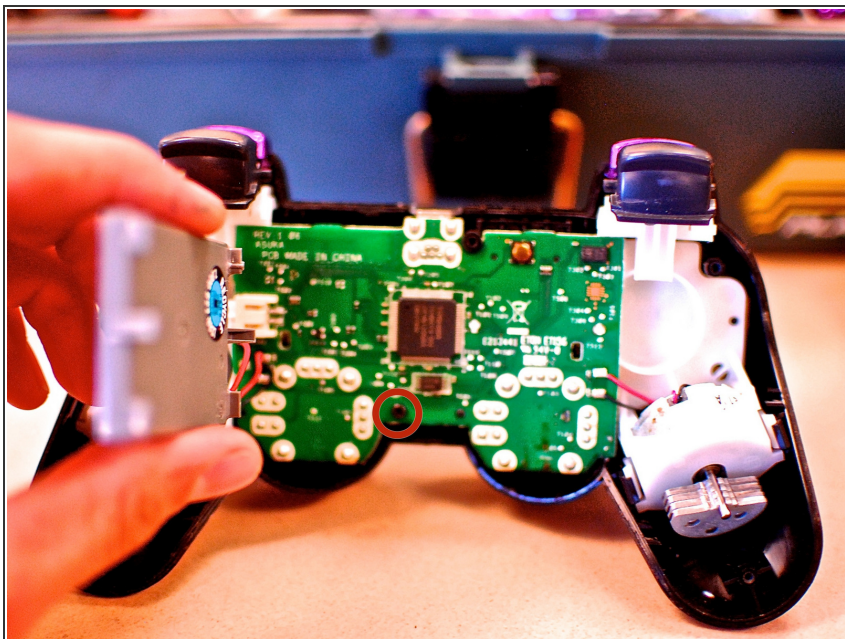

- Now that the battery is off you can remove the screw holding the mother board down.


## Step 6 — Unclip

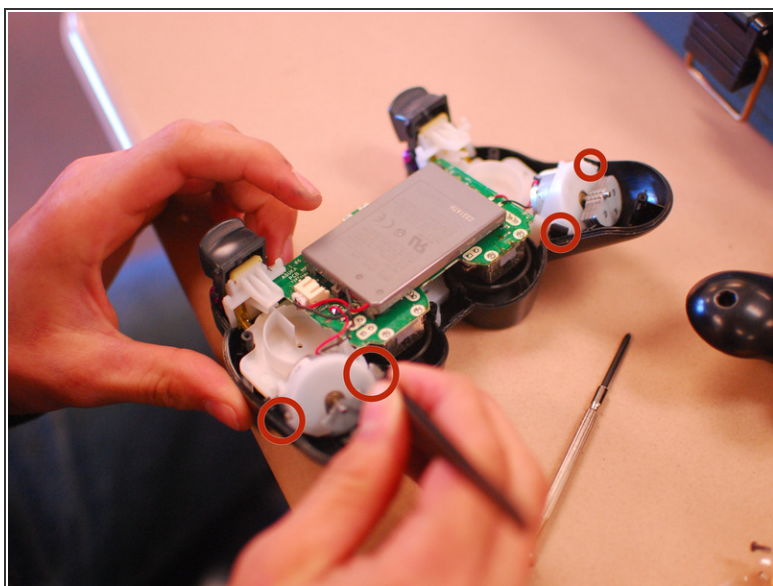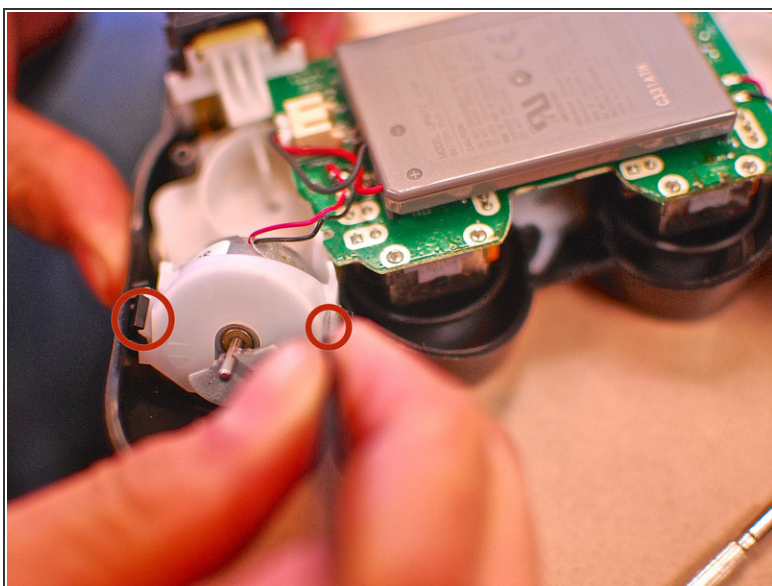

- Next you will unclip these prongs on the motors (circled in red). Do this for both motors.




## Step 7 — Separate

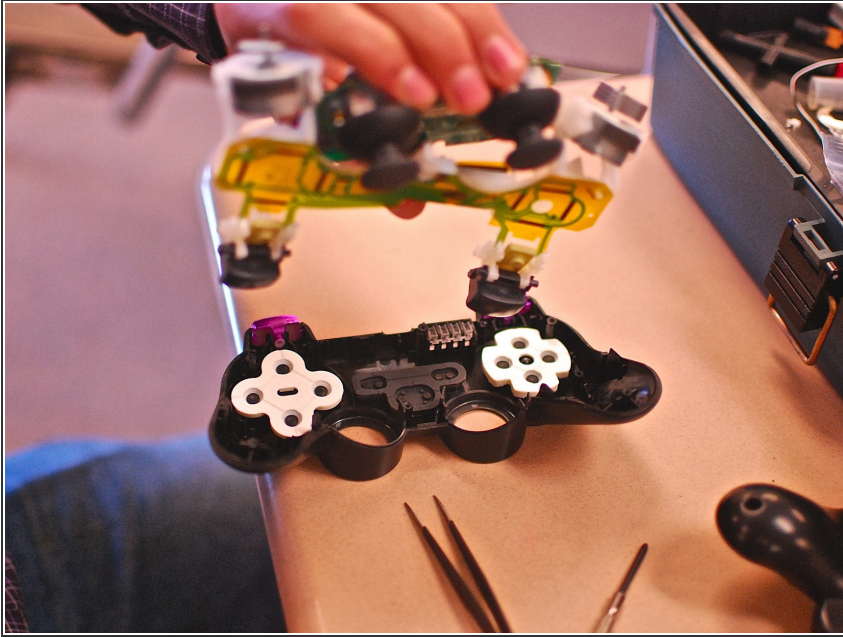


- Then you just lift the motherboard and control panel. It will come off giving you access to the front buttons.

## Step 8 — Joy Stick

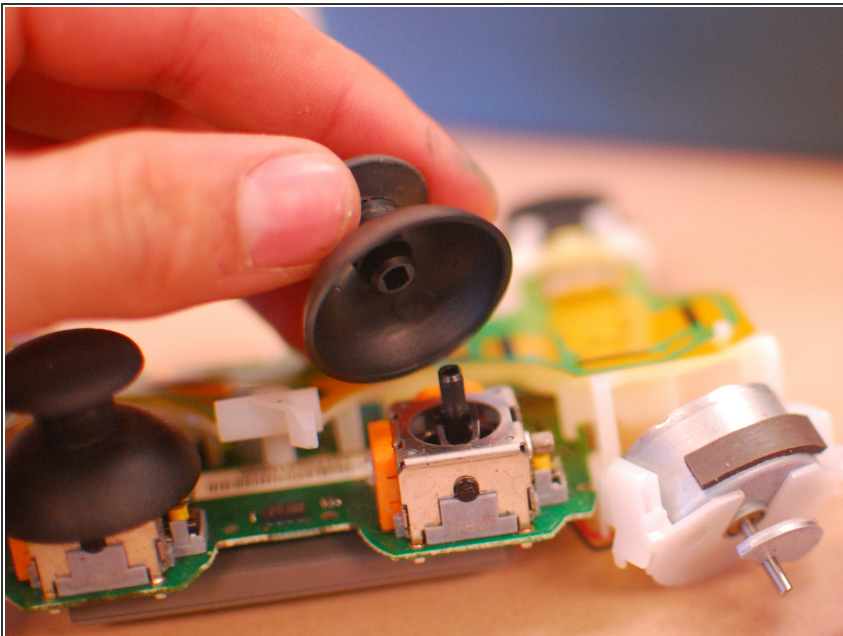

- Next your joy sticks just pop off and the new ones pop back on.

## Step 9 — Buttons

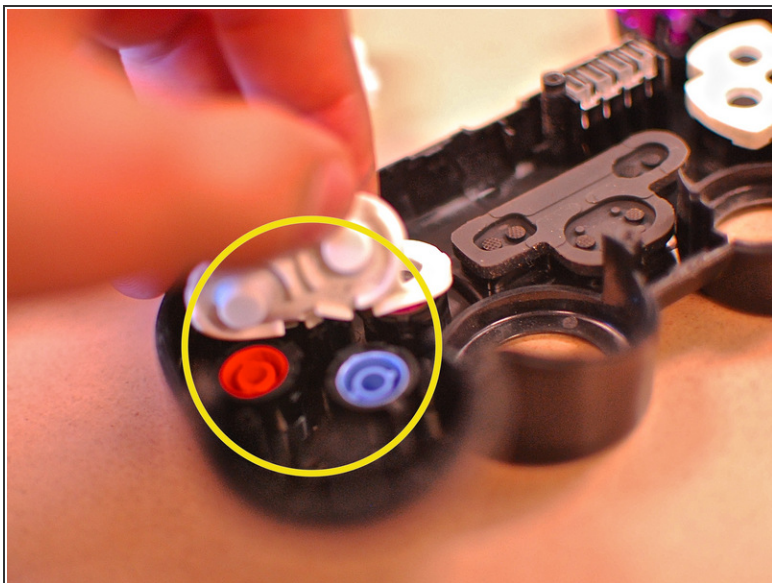

- Then lifting these pads will give you access to the four front buttons (circled in yellow), and D-pad (circled in red).



## Step 10 — Add New Ones



- The D-pad and buttons just slide right in place of the old ones.




## Step 11 — Re-Attach

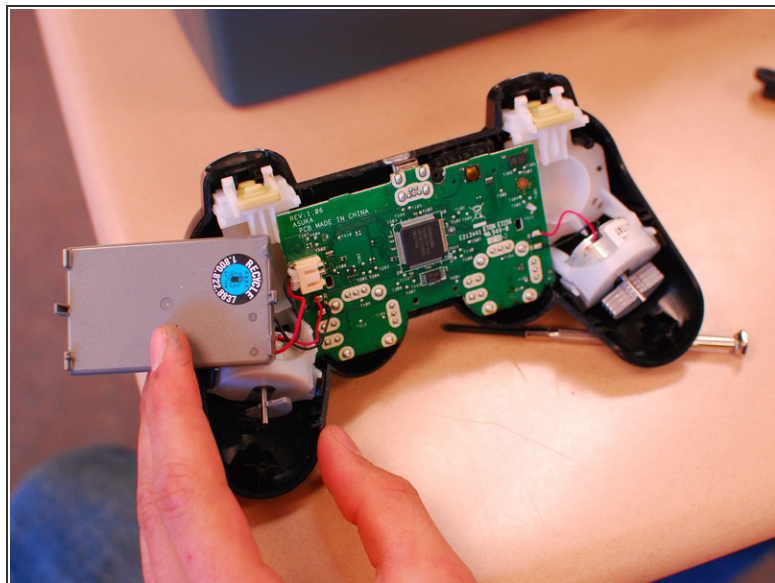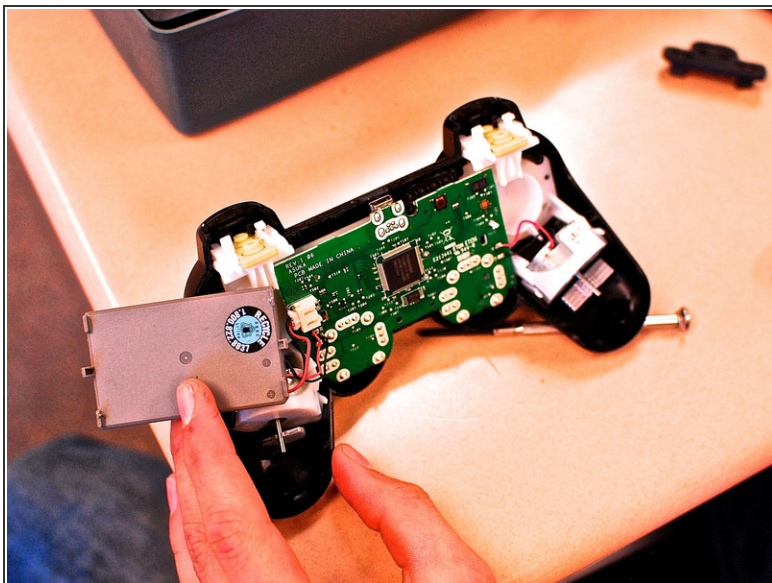

- Then you clip that control panel and motherboard back in the same way it came out.


## Step 12 — Screw Back In Mother Board

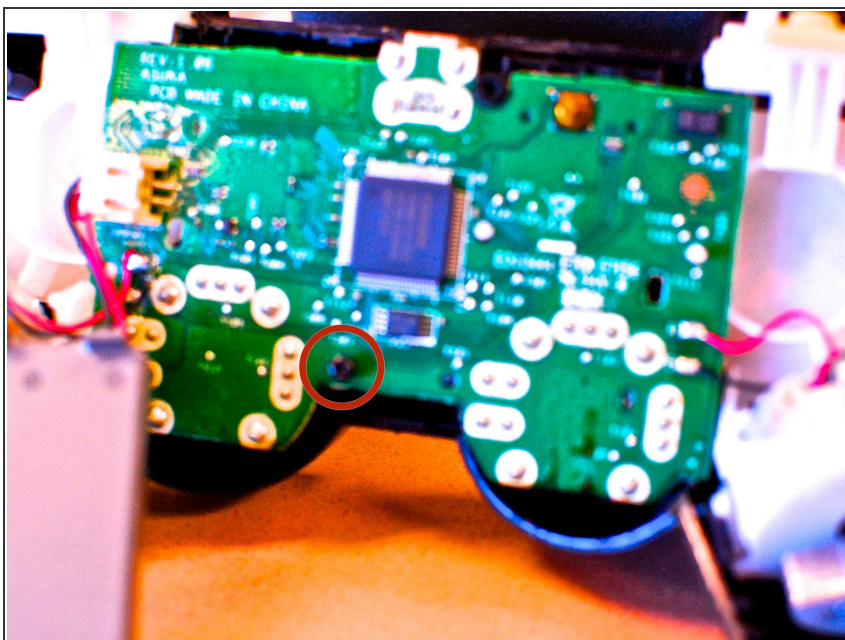

- Don't forget to insert the screw (circled in red) holding the motherboard to the control panel.




## Step 13 — Insert Trigger Buttons

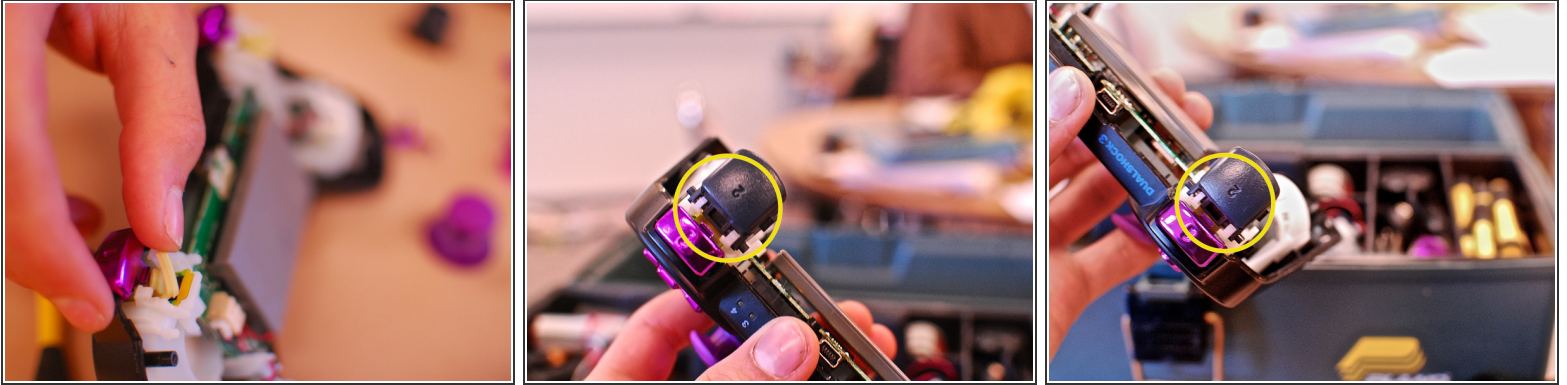

- Your trigger buttons slide out, and the new ones slide in. The bottom L2 and R2 buttons have a little bar that clicks in, and out of the holder as well (circled in yellow).

## Step 14 — Re-Attach Battery

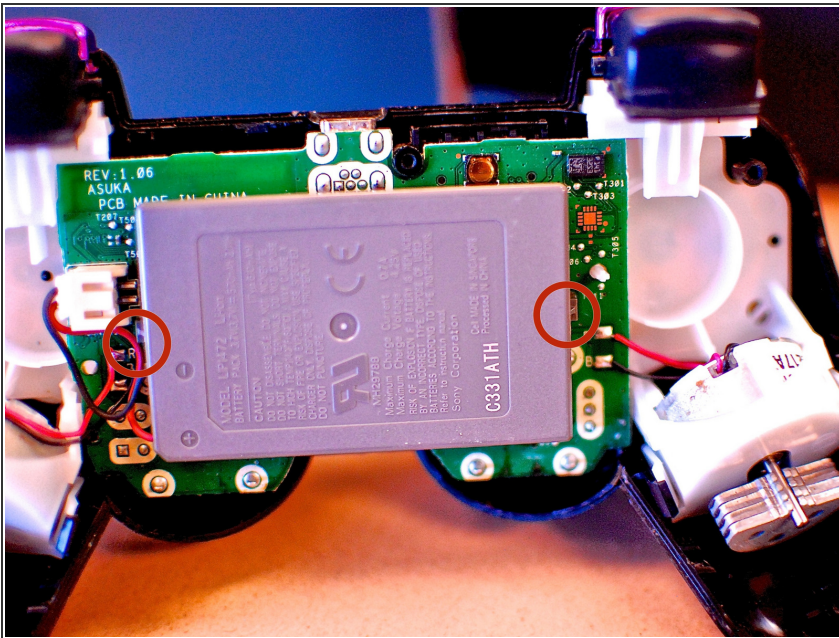

- Clip your battery back on.

## Step 15 — Finished



- Clip the back of the case back on and screw the 5 screws back in and you're done.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 07:42:28 AM.